

Removal Instructions for RAV4 ECU by Cartronics.

1) RAV 4 Glove BOX



Open Glove Box



- 2) Remove Glove box lid (remove screws)



- 3) Take side trim off






4) Side trim now removed



- 5) Remove screws from security bracket.

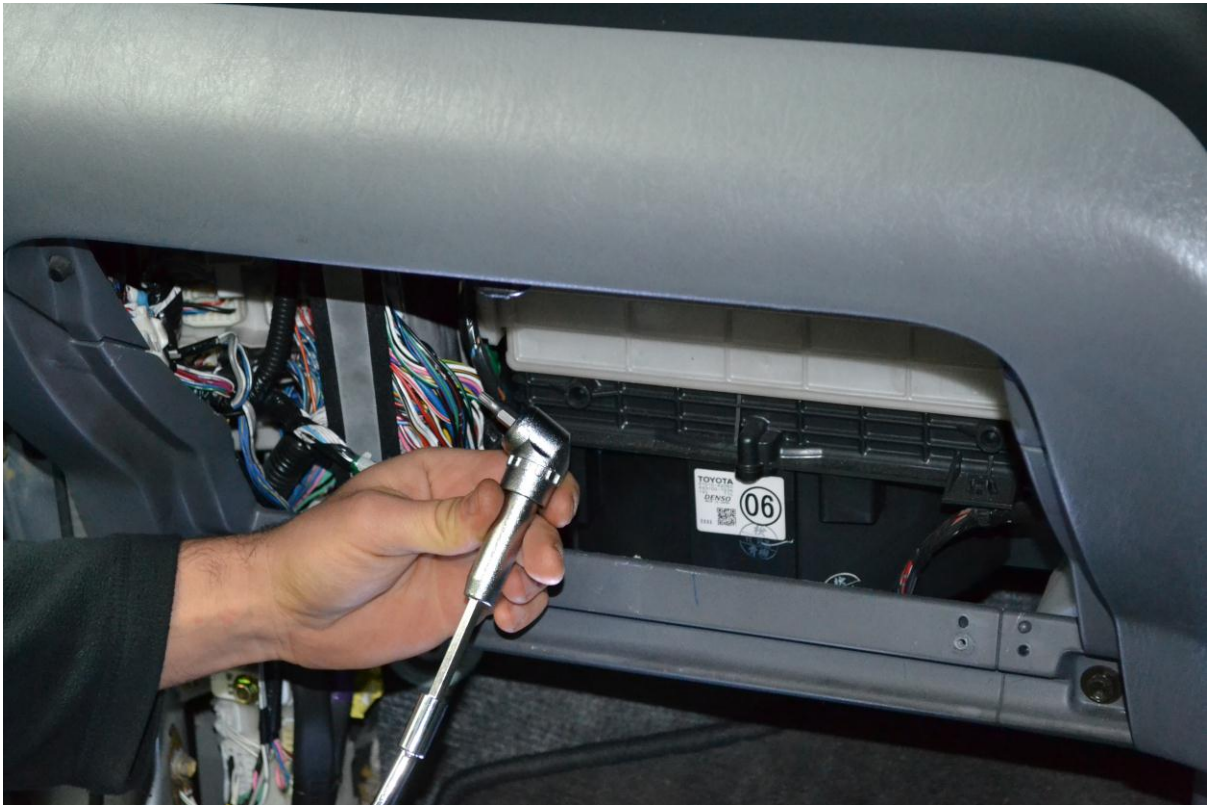


- 6) Remove lower screw from security Bracket



8) Remove 10mm bolt as shown



7) Unplug ECU connectors

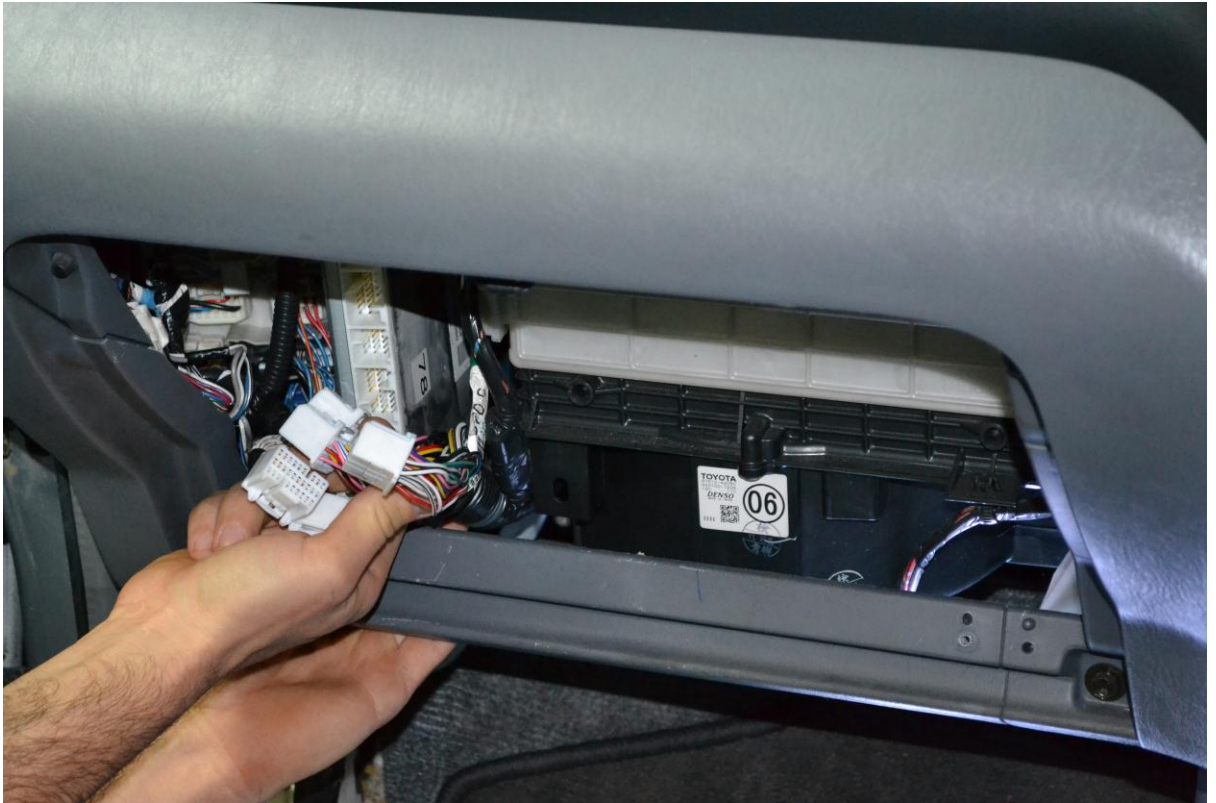

8) Remove ECU and bracket out via lower dashboard



9) Remove the bracket and send us the ECU for a fast 24hr return repair.

